ABC
PRODUCTS

Instructions for
ABC PRODUCTS ALL IN ONE CARD READER

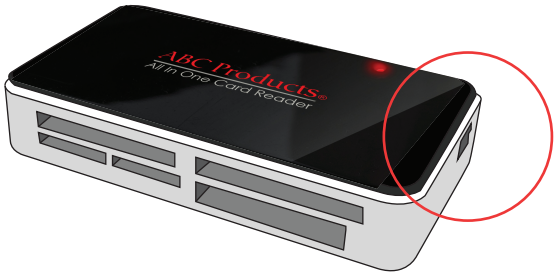

CONNECTING YOUR CARD READER
Connect the card reader to your PC or MAC by inserting the USB cable provided into the USB slot on the card reader (located on the right hand side of the card reader. The other end of the cable goes into the USB slot on your PC or MAC

COMPACT FLASH
The slot for the COMPACT FLASH card is on the back of the unit. The CF card has to be turned upside down before it is inserted into the card reader. Before inserting the card check that all of the pins inside the CF slot are in tact and straight. If even one pin is bent or missing it can cause the card reader to reject the CF card. In this case contact us for a replacement card reader

USING THE CARD READER
After you've installed the card reader onto you computer, push you memory card into the appropriate slot on the card reader. Some memory cards have to be placed in the card reader upside down like **SONY MAGICGATE, COMPACT FLASH** and **MICRO SD**

L.E.D
When the card is correctly inserted into the card slot the computer will recognise the card. At this point a light may show on your card reader. Don't be alarmed if the is no light. There are many different models of the ABC card reader, some show a red light, some show a green light and some show an orange light. Some show no light at all. You will know if your card reader is working because it will register on your computer